







BRAUN

Series 1

150
140



Type 5684

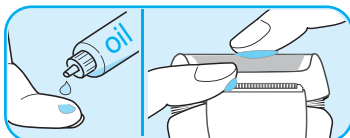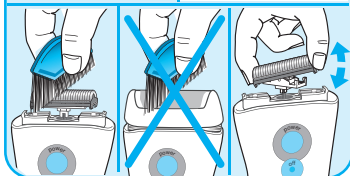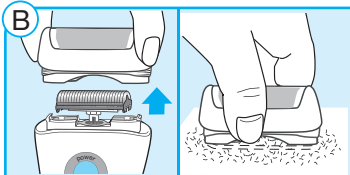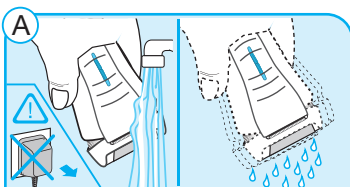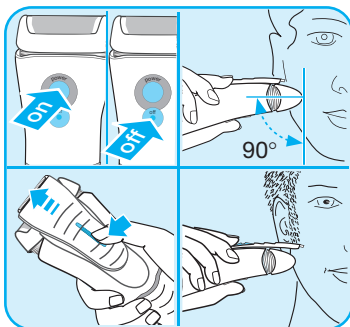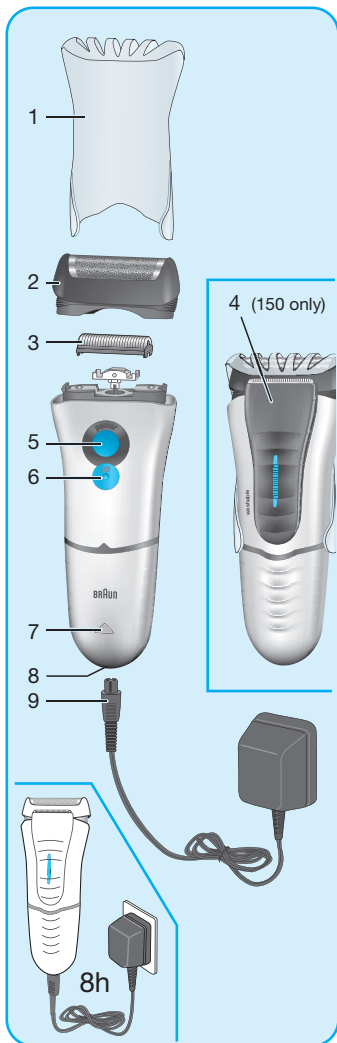

한국어

본 제품은 엄격한 품질, 기능, 디자인 기준 하에 생산된 제품입니다. 브라운 제품의 구입에 감사드리며 본 제품을 사용하시기 전에 반드시 사용 설명서를 읽어 주십시오.

주의사항

본 제품은 안전 저전압 전원 장치가 갖추어진 전용 코드 세트가 들어 있습니다. 어떤 부품도 함부로 바꾸거나 조작하지 마십시오. 감전의 위험이 있습니다. 이 기기는 어린이나 육체적, 정신적 능력이 결여된 사람들이 안전을 책임지는 감독자 없이 사용하는 것을 금합니다. 어린이의 손에 닿지 않는 곳에 두십시오.

제조일시를 확인하기 위해서는 제품 또는 플러그에 표기된 로트번호를 참고하십시오. 바랍니다. 첫 자리는 제조 년도의 마지막 숫자를 나타내며, 다음 두 자리 숫자는 제품이 생산된 주를 표시합니다. 예 : 429 - 이 제품은 2004년 29주차에 생산된 제품입니다.

각 부의 명칭

1. 면도망 보호캡
2. 면도망
3. 면도날
4. 긴 수염 정리용 트리머(모델 150만 해당)
5. on 스위치 (<<power>>)
6. <<off>> 스위치
7. 전원 LED(발광다이오드)
8. 면도기 전원 소켓
9. 전용 코드 세트

면도기 충전 방법

충전을 위한 최적 온도는 5°C에서 35°C입니다. 면도기를 50°C가 넘는 곳에 장시간 두지 마십시오.

- 면도기의 전원을 반드시 끈 상태로 전용 코드 세트(9)를 이용하여 전기 콘센트에 연결합니다.
- 면도기 스위치가 확실히 꺼지게 하기 위해선 충전 시작 전 off 스위치(6)를 눌러줍니다.
- 최초 충전 시 16시간 연속으로 면도기가 충전 되도록 두십시오.
- 전원 LED(7)는 면도기가 전기 콘센트에 연결됐음을 나타냅니다.
- 후속의 충전도 대략 8시간 정도 소요됩니다.
- 완전히 충전되면 무선으로 면도 할 수 있는 시간이 20분 가량 됩니다. 이는 턱수염이 자란 상태에 따라 달라질 가능성이 있습니다.
- 배터리 용량은 여러 번 충전과 방전을 반복한 후에만 최대화 됩니다.

면도

면도기 작동을 위해 스위치(5)를 누르십시오.

모델 150만 해당: 구레나룻, 콧수염 혹은 턱수염을 다듬으려면 긴 수염 정리용 트리머(4)를 위로 밀어올려 주십시오.

완벽한 면도를 위한 제안

**최상의 면도를 위해서
다음의 3단계를 제안합니다.**

1. 세안 전에 면도하십시오.
2. 늘 면도기를 피부에 정각 90°로 잡아 주십시오.
3. 피부를 골고려 편 상태에서 턱수염이 자란 반대 방향으로 면도하십시오.

청소

이 제품은 흐르는 물에서 손쉽게 세척할 수 있습니다. 경고: 청소 전에 손잡이 부분을 전원과 분리 하십시오.

정기적인 청소는 면도 성능을 향상시킵니다.
매번 면도 후에는 흐르는 물에 면도기 헤드를
헹구는 것이 깨끗이 보관하는 쉽고 빠른
방법입니다. (A):

- 면도기의 스위치를 켜고 면도기 헤드를 흐르는 뜨거운 물에 헹구십시오. 연마성분이 들어있지 않은 액체 비누는 사용하셔도 됩니다. 거품을 모두 헹군 후에 면도기를 수 초간 작동 시키십시오.
- 그 다음, 면도기 스위치를 끄고 면도망(2)과 면도날(3)을 꺼냅니다. 분리된 면도 부품들을 말려주십시오.
- 정기적으로 물 세척을 하는 경우에는 일주일에 한번 긴 수염 정리용 트리머(4)와 면도망에 윤활유를 한 방울 떨어뜨려 주십시오.

제공된 브러시(B)를 사용해서도 면도기를
청소하실 수 있습니다.

- 면도기 스위치를 끄십시오. 면도망을 빼내어 평평한 표면 위에 가볍게 두드리시오.
- 브러시를 사용해서 면도날과 면도기 헤드의 내부를 청소하십시오. 면도망은 브러시로 청소하지 마십시오. 면도망이 손상될 수 있습니다.

면도기를 최상의 상태로 유지하려면

면도망과 면도날의 교체

면도기의 성능을 100% 유지하기 위해
면도망(2)과 면도날(3)이 마모되거나 최소
18개월이 지나면 교체하십시오. 두 가지 부품을
동시에 교체하면 피부 자극을 줄이고 좀 더
밀착된 면도를 할 수 있습니다.
(면도망과 면도날 : 11 B)

환경보호 주의사항

이 제품에는 충전용 배터리가 들어있습니다. 환경 보호를 위하여 수명이 다한 제품을 일반 쓰레기와 함께 버리지 마십시오. 폐기 시에는 브라운 서비스 센터를 이용하거나 해당 지역의 충전지 폐기장소에 폐기 하십시오.



본 설명서는 사전 예고 없이 변경될 수 있습니다.

본 제품은 European Directives EMC
2004/108/EC 지침과 저 전압 규정
2006/95/EC를 따르고 있습니다.



전기 관련 규격은 전용 코드 세트에
인쇄된 사항을 참조하십시오.

품질 보증

- 본 제품은 **구입일로부터 1년간** 품질을 보증합니다.
- 1년간의 품질 보증기간 동안 제품 자체나 생산과정에서 비롯된 불량품은 상태에 따라 무료보수 또는 교환해 드립니다.
- 보증기간 내이라도 소비자의 귀책사유에 의한 파손 (전압을 잘못 사용한 경우, 부적절한 전원 플러그에 연결한 경우, 사용 중 파손 등), 정상적인 마모, 사용에 지장이 없는 경미한 결함 등은 무상수리 또는 교환이 적용되지 않습니다.
- 브라운 서비스 센터가 아닌 다른 곳에서 수리를 하였거나 브라운 정품이 아닌 부품을 사용하였을 경우에는 품질보증 대상에서 제외됩니다. 그리고 본 제품의 구입일자가 판매점에 의해 혹은 구입시의 영수증에 의해 확인되어야만 정상적인 품질 보증품으로 인정됩니다. **(구입시 영수증을 잘 보관하시어 애프터 서비스 시 불이익이 없도록 하십시오.)**
- 애프터 서비스를 받으셨더라도 원래의 품질보증기간이 연장되는 것은 아닙니다.

본 제품은 소비자분쟁해결기준에 따라
보상받을 수 있습니다.

A/S 문의: 1588-1588

가까운 대우일렉 서비스 센터에서 A/S를 받으실 수 있습니다.

브라운제품:

전국 유명 백화점, 할인점, 양판점 및 전자상가에서 구입할 수 있습니다.

<http://www.braun.com>

<http://www.braun.co.kr>

품질보증서

본 제품은 철저한 품질관리와 감사를 거쳐서 제조·수입된 제품입니다.

아래 기재된 내용으로 품질을 보증합니다.

제 품 명		모 델 명	
구 입 일		보증기간	구입일로부터 1년
고		판	
매		매	
객		점	

한국 피앤지 판매 (유)

서울특별시 강남구 역삼동 675-4 1004호 16층
전화 000-000-0000(수신자부담)



English

Our products are designed to meet the highest standards of quality, functionality and design. We hope you enjoy your new Braun Shaver.

Warning

Your shaver is provided with a special cord set, which has an integrated Safety Extra Low Voltage power supply. Do not exchange or tamper with any part of it, otherwise there is risk of electric shock.

This appliance is not intended for use by children or persons with reduced physical or mental capabilities, unless they are given supervision by a person responsible for their safety. In general, we recommend that you keep the appliance out of reach of children.

Description

- 1 Foil protection cap
- 2 Shaver foil
- 3 Cutter block
- 4 Long hair trimmer (model 150 only)
- 5 On switch («power»)
- 6 «off» switch
- 7 Power LED
- 8 Shaver power socket
- 9 Special cord set

Charging

The best environmental temperature for charging is between 5 °C and 35 °C. Do not expose the shaver to temperatures higher than 50 °C for extended periods of time.

- Using the special cord set (9)

connect the shaver to an electrical outlet with the motor switched off.

- To make sure that the shaver is switched off, press the «off» switch (6) before you start charging.
- When charging for the first time, leave the shaver to charge continuously for 16 hours.
- The power LED (7) indicates that the shaver is connected to an electrical outlet.
- Subsequent charges will take about 8 hours.
- A full charge provides up to 20 minutes of cordless shaving time. This may vary according to your beard growth.
- Maximum battery capacity will only be reached after several charging/discharging cycles.

Shaving

Press the on switch (5) to operate the shaver.

Model 150 only: To trim sideburns, moustache or beard, slide the long hair trimmer (4) upwards.

Tips for the perfect shave

For best shaving results, Braun recommends you to follow 3 simple steps:

1. Always shave before washing your face.
2. At all times, hold the shaver at right angles (90°) to your skin.
3. Stretch your skin and shave against the direction of your beard growth.

Cleaning



The shaver head is suitable for cleaning under running tap water.

Warning: Detach the shaver from the power supply before cleaning the shaver head in water.

Regular cleaning ensures better shaving performance. Rinsing the shaving head under running water after each shave is an easy and fast way to keep it clean (A):

- Switch the shaver on and rinse the shaver head under hot running water. You may use liquid soap without abrasive substances. Rinse off all foam and let the shaver run for a few more seconds.
- Next, switch off the shaver, remove the shaver foil (2) and cutter block (3). Then leave the disassembled shaving parts to dry.
- If you regularly clean the shaver under water, then once a week apply a drop of light machine oil onto the long hair trimmer (4) and shaver foil.

Alternatively, you may clean the shaver using the brush provided (B):

- Switch off the shaver. Remove the shaver foil and tap it out on a flat surface.
- Using the brush, clean the cutter block and the inner area of the shaver head. However, do not clean the shaver foil with the brush as this will damage the foil.

Keeping your shaver in top shape

Replacing the shaver foil and cutter block

To maintain 100% shaving performance, replace the shaver foil (2) and cutter block (3) at least every 18 months or when worn. Change both parts at the same time for a closer shave with less skin irritation. (Shaver foil and cutter block: 11B)

Environmental notice

This appliance contains rechargeable batteries. In the interest of protecting the environment, please do not dispose of the product in household waste at the end of its useful life. Disposal can take place at a Braun Service Centre or at appropriate collection points provided in your country.



Subject to change without notice.

This product conforms to the European Directives EMC 2004/108/EC and Low Voltage 2006/95/EC.



For electric specifications, see printing on the special cord set.

